






INSTRUCTIONS FOR INSTALLATION OF HYDROSE LED CURBSTONES

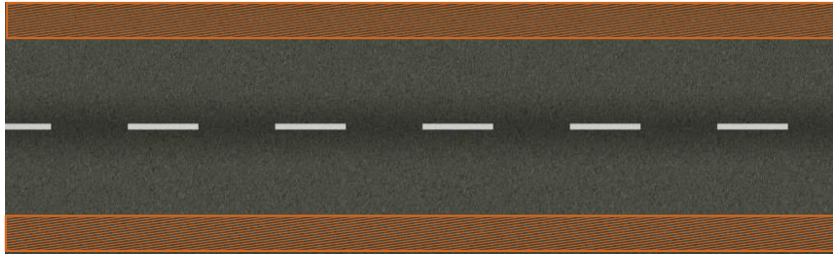


Dig 3 Inch Deep & 9 Inch Wide Trench By the Road

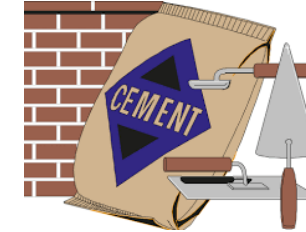


Pour M20 or Higher Grade Concrete in the Trench.

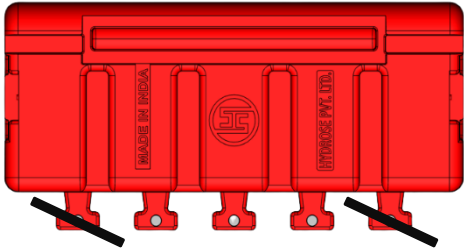


Place 2 Foundation Roads in the 1st & 5th Leg of the Curb Stone.

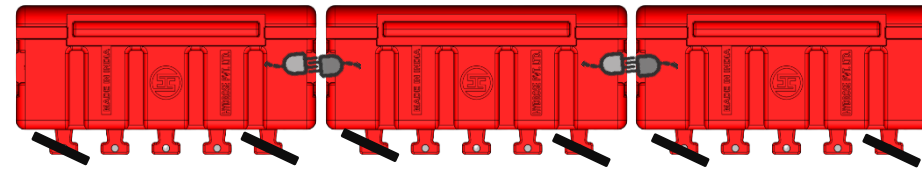

Align the Curb Stones & connect the Male-Female Wires between the Blocks.

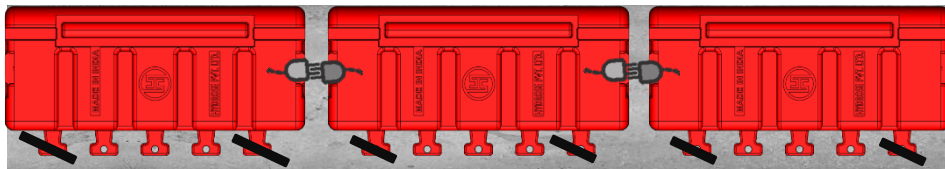

Pour Cement Between the Curb Stones & ensure all wires are concealed.

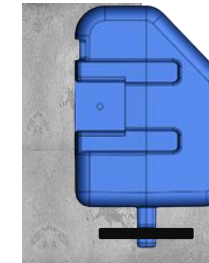

Pour Cement Behind the Block & Level the cement to the top of the curb stones.

IMPORTANT PRECAUTIONS

1. Do Not Hold the LED Curb Stones by the wires. They may damage the connection & LED Inside. Use the legs or the block as a whole.
2. Please ensure the cement grade is maintained and it fully conceals all exposed Wiring as well prevents exposure to water.
3. Use a water proof coat on the cement once it dries.
4. Regularly check the Curb Stones and their illumination as the installation process moves forward.
5. Failure to adhere to the proper installation methodology will void the warranty.
6. Please contact us at admin@hydrose.in if you have any queries before commencing work.